

DataStream™ v6 Update Checklist

Please be advised that updating your Apogee™ tool to DataStream™ version 6 requires a different procedure compared to the installation of patch files that you might already be familiar with. To guarantee a successful update, please refer to the checklist below. Additionally, a video tutorial is available on our [website](#) for your convenience. Please contact our [customer support team](#) for assistance with any questions or concerns.

Before You Begin

- Windows: Download free Win32 Disk Imager software from <https://sourceforge.net/projects/win32diskimager/>
- Mac/Linux: Performed with factory-installed software already present on the computer.

Part 1: Download the DataStream™ v6 Image File

- Navigate to www.costeffectiveequipment.com
- Click the **Support** drop down menu.
- Click the button entitled **Click Here for Information on the Latest Update.**
- Click the button entitled **Download DataStream™ *v6 Update.**

**Exact version named will vary as updates are released.*

Part 2: Extract the DataStream™ v6 Image File

- Navigate to your **Downloads** folder & identify the **DataStream™ image** zip file.
- Right click the zip and select **Extract All.**
- Supply a destination path for the file.
- Click **Extract.**

Part 3: Load Image File to USB

- Launch **Win32DiskImager** from your Start Menu. (*see topmost item *Before You Begin**)
- Respond *accordingly* to the **User Account Control** message.
- In **Win32DiskImager** click the file icon and supply the path to the image file.
- Insert a USB drive into your PC, select the appropriate drive from the **Device** dropdown, and then click **Write.**
- Acknowledge the warning regarding risk of writing to a physical device.
- Once complete, click **OK** and then click **Exit** to close the application.
- Open **File Explorer**, identify the drive (now titled **Boot**), right click, and select **Eject.**
- Remove the USB from your PC.

□ Part 4: Apply Update to Apogee™ Equipment

- Log in to the Apogee™ with Admin credentials.
- Click the **About** tab at the top of the screen.
- ***IMPORTANT*** On the **About** screen make a note of the version your equipment is currently running. This information is found in the lower left corner under **DataStream™ System Applications**
 - Tools running **v5** will be displayed in *yyyymmdd* format.

Example:

Firmware	20220721090612
Web UI	20220727213957
Diego	20220526134543
Manny	20160404142354
Postal	20160404142634

- Tools running **v6** will be displayed in *v6.x.x* format.

Example:

Firmware	v6.1.0
Web UI	v6.1.0
Diego	v6.1.0
Manny	v6.0.0
Postal	v6.0.0

- Click the **Software Update** button at the bottom of the screen.
- Insert the USB Drive into the rear Apogee™ utility panel to load available patches
 - Machines currently running **v5** will select the *v5flashTool.bsi*
 - Machines currently running **v6** will select the *v6flashTool.bsi*

FAILURE TO SELECT THE APPROPRIATE PATCH FILE FOR YOUR MACHINE'S CURRENT VERSION WILL RESULT IN A FAILED UPDATE

- Tap to select the correct patch file for your tool and then tap **Apply** to initiate the update.
- When prompted [*Remove USB and Reboot*] remove the thumb drive and cycle power.
- The tool will run through a series of configuration screens. Reboot when => is displayed as the last line.
- The tool will run through another configuration screen. Reboot when => is displayed as the last line.
- Log in to the Apogee™ with Admin credentials.
- Click the **About** tab at the top of the screen.
- Verify that system information reflects the version installed.