



X-Pro II Configuration



CHOOSE TOP

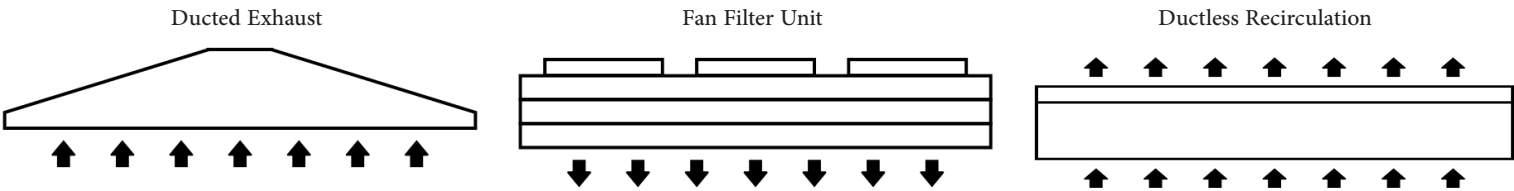


CHOOSE WIDTH

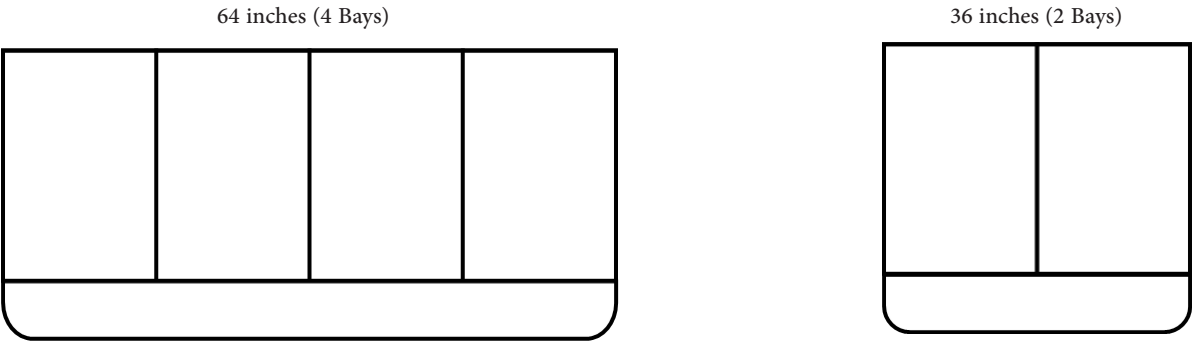

*TOP VIEW

CHOOSE TOOLS

1 Bay Tools



- Apogee® Spin Coater
- Apogee® Developer/Cleaner
- Apogee® Bake Plate
- 1 Bay Workspace*
- DI Sink

2 Bay Tools



- Apogee® 450 Spin Coater
- Apogee® 450 Developer/Cleaner
- Apogee® 300 Bake Plate
- 2 Bay Workspace*


*Workspaces are prepared for future equipment installations

X-Pro II Configuration



OPTIONAL SAFETY PACKAGE

- Automatic shutdown of the workstation in case of a fault
- Alarm prevents workstation startup until the fault is resolved
- Reset button and indicator provided when systems are fault-free
- Audible alarm with mute option and visual indicators
- Dry contact output for seamless integration with external devices
- Choose up to four available sensors:
 - Left Containment Leak Sensor
 - Chemical Drawer Leak Sensor
 - Right Containment Leak Sensor
 - Exhaust Leak Sensor
 - 3 Leak Sensors (linked into 1 alarm)
 - Overtemp Sensor (can be used in exhaust)
 - N2/CDA Flow Rate Sensor
 - External Sensor (24VDC contact)
 - No Sensor

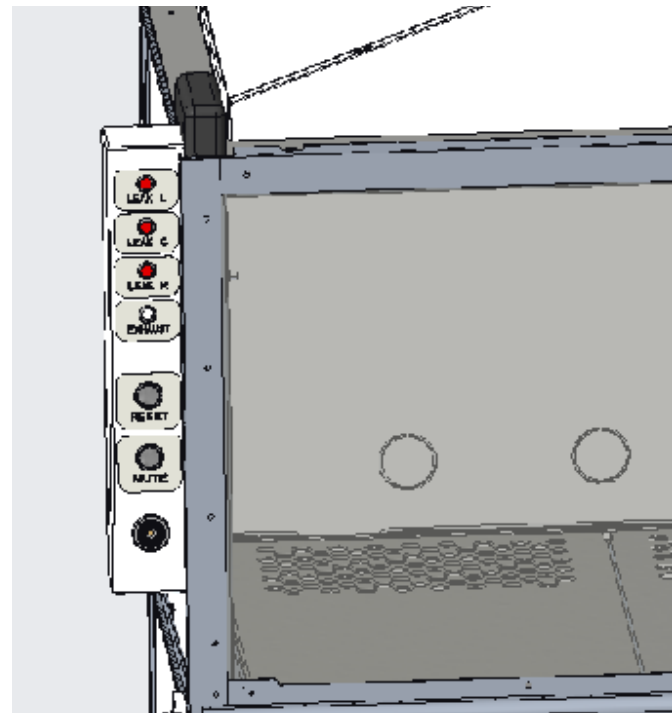

MOST COMMON SELECTION

- Left Containment Leak Sensor
- Chemical Drawer Leak Sensor
- Right Containment Leak Sensor
- Exhaust Leak Sensor

